


<b>TRANSMITTAL LETTER</b> (General Patent Pending)		Docket No. 10596-US	
In Re Application Of: <b>Stephen Guy ROUTLIFFE</b>			
Serial No. 09/767,150	Filing Date 01/23/2001	Examiner	Group Art Unit
Title: <p style="text-align: center;"><b>TEMPLATE FOR ATM CELLS</b></p>			
<p style="text-align: center;"><u>TO THE ASSISTANT COMMISSIONER FOR PATENTS:</u></p> <p>Transmitted herewith is:</p> <p><b>SUBMISSION OF CERTIFIED COPIES OF PRIORITY APPLICATION IN SUPPORT OF CLAIM TO PRIORITY UNDER 35 USC 119</b></p> <p>We are submitting herewith the priority document in respect of the above-referenced U.S. patent application namely, British Patent Application No. 0001534.7</p> <p>in the above identified application.</p> <p> <input checked="" type="checkbox"/> No additional fee is required.  <input type="checkbox"/> A check in the amount of _____ is attached.  <input type="checkbox"/> The Assistant Commissioner is hereby authorized to charge and credit Deposit Account No. _____ as described below. A duplicate copy of this sheet is enclosed.         </p> <p> <input type="checkbox"/> Charge the amount of _____  <input type="checkbox"/> Credit any overpayment.  <input type="checkbox"/> Charge any additional fee required.         </p> <div style="display: flex; justify-content: space-between; align-items: flex-end; margin-top: 20px;"> <div style="text-align: center;">             Signature         </div> <div>           Dated: 03/15/2001         </div> </div> <p><b>Richard J. Mitchell Reg. No. 34,519</b></p> <p><b>MARKS &amp; CLERK</b>          P.O. Box 957, Station B          Ottawa, Ontario          K1P 5S7, CANADA          613-236-9561</p> <div style="border: 1px solid black; padding: 5px; margin-top: 10px;"> <p>I certify that this document and fee is being deposited on _____ with the U.S. Postal Service as first class mail under 37 C.F.R. 1.8 and is addressed to the Assistant Commissioner for Patents, Washington, D.C. 20231.</p> <p style="text-align: center; margin-top: 10px;">_____ Signature of Person Mailing Correspondence</p> <p style="text-align: center; margin-top: 10px;">_____ Typed or Printed Name of Person Mailing Correspondence</p> </div> <p>CC:</p>			

THIS PAGE BLANK (USPTO)



INVESTOR IN PEOPLE


The Patent Office  
Concept House  
Cardiff Road  
Newport  
South Wales  
NP10 8QQ

I, the undersigned, being an officer duly authorised in accordance with Section 74(1) and (4) of the Deregulation & Contracting Out Act 1994, to sign and issue certificates on behalf of the Comptroller-General, hereby certify that annexed hereto is a true copy of the documents as originally filed in connection with the patent application identified therein.

In accordance with the Patents (Companies Re-registration) Rules 1982, if a company named in this certificate and any accompanying documents has re-registered under the Companies Act 1980 with the same name as that with which it was registered immediately before re-registration save for the substitution as, or inclusion as, the last part of the name of the words "public limited company" or their equivalents in Welsh, references to the name of the company in this certificate and any accompanying documents shall be treated as references to the name with which it is so re-registered.

In accordance with the rules, the words "public limited company" may be replaced by p.l.c., plc, P.L.C. or PLC.


Re-registration under the Companies Act does not constitute a new legal entity but merely subjects the company to certain additional company law rules.

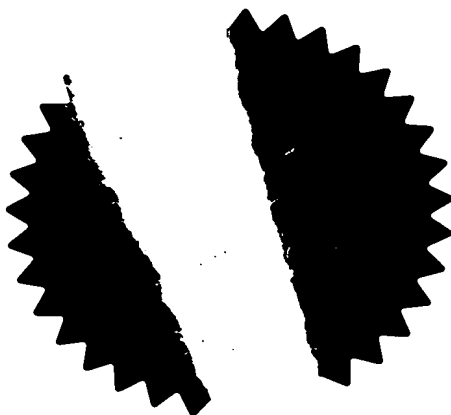

Signed

Dated 5 February 2001

**THIS PAGE BLANK (USPTO)**

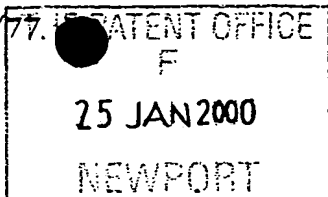

# Request for grant of a patent

(See the notes on the back of this form. You can also get an explanatory leaflet from the Patent Office to help you fill in this form)

The Patent Office

Cardiff Road  
Newport  
Gwent NP9 1RH

1. Your reference	RPH.P51033GB			25 JAN 2000
2. Patent application number (The Patent Office will fill in this)	0001534.7			25JAN00 E507569-3 001063 P01/7700 0.00-0001534.7
3. Full name, address and postcode of the or of each applicant (underline all surnames)	Mitel Corporation 350 Legget Drive Kanata Ontario Canada, K2K 2W7			
Patents ADP number (if you know it)				
If the applicant is a corporate body, give the country/state of its incorporation	Canada 607630 0000			
4. Title of the invention	"Template for ATM Cells"			
5. Name of your agent (if you have one)	Marks & Clerk			
"Address for service" in the United Kingdom to which all correspondence should be sent (including the postcode)	4220 Nash Court Oxford Business Park South Oxford OX4 2RU			
Patents ADP number (if you know it)	7271125001			
6. If you are declaring priority from one or more earlier patent applications, give the country and the date of filing of the or of each of these earlier applications and (if you know it) the or each application number	Country	Priority application number (if you know it)	Date of filing (day / month / year)	
7. If this application is divided or otherwise derived from an earlier UK application, give the number and the filing date of the earlier application	Number of earlier application		Date of filing (day / month / year)	
8. Is a statement of inventorship and of right to grant of a patent required in support of this request? (Answer 'Yes' if: a) any applicant named in part 3 is not an inventor, or b) there is an inventor who is not named as an applicant, or c) any named applicant is a corporate body. See note (d))	Yes			

**Patents Form 1/77**

9. Enter the number of sheets for any of the following items you are filing with this form. Do not count copies of the same document

Continuation sheets of this form

Description 0

23

Claim(s)

2

Abstract

1

Drawing(s)

4 16

10. If you are also filing any of the following, state how many against each item.

Priority documents

Translations of priority documents

Statement of inventorship and right to grant of a patent (*Patents Form 7/77*)Request for preliminary examination and search (*Patents Form 9/77*)1Request for substantive examination (*Patents Form 10/77*)Any other documents  
(please specify)

11. I/We request the grant of a patent on the basis of this application.

Signature Marks & Clerk Date

Marks &amp; Clerk

24 January 2000

12. Name and daytime telephone number of person to contact in the United Kingdom

Richard Harding - 01865 397900

**Warning**

*After an application for a patent has been filed, the Comptroller of the Patent Office will consider whether publication or communication of the invention should be prohibited or restricted under Section 22 of the Patents Act 1977. You will be informed if it is necessary to prohibit or restrict your invention in this way. Furthermore, if you live in the United Kingdom, Section 23 of the Patents Act 1977 stops you from applying for a patent abroad without first getting written permission from the Patent Office unless an application has been filed at least 6 weeks beforehand in the United Kingdom for a patent for the same invention and either no direction prohibiting publication or communication has been given, or any such direction has been revoked.*

**Notes**

- If you need help to fill in this form or you have any questions, please contact the Patent Office on 0645 500505.*
- Write your answers in capital letters using black ink or you may type them.*
- If there is not enough space for all the relevant details on any part of this form, please continue on a separate sheet of paper and write "see continuation sheet" in the relevant part(s). Any continuation sheet should be attached to this form.*
- If you have answered 'Yes' Patents Form 7/77 will need to be filed.*
- Once you have filled in the form you must remember to sign and date it.*
- For details of the fee and ways to pay please contact the Patent Office.*

## Template for ATM Cells

This invention relates to cell relay networks, such as ATM (Asynchronous Transfer Mode) networks, and more particularly to a method and device for constructing cells for transmission over such a network.

- 5 In a cell relay network, such as ATM, the data is assembled in to fixed size cells which are transferred over the network in accordance with information stored in the cell header. In case of ATM cells are 53 bytes in length with five bytes reserved for the header.

The cells are assembled by the ATM Adaptation Layer (AAL). Various layers, numbered from 1 to 5, offer different types of service. For example, AAL 1 relates to a service that  
10 offers constant bit rate traffic, such as voice or video traffic. In the prior art, cells must be custom assembled before being passed to the UTOPIA interface for connection to the physical layer. However, this can be unnecessarily slow because much of the information contained in the headers does not change from cell to cell.

According to the present invention there is provided a method of assembling cells for use  
15 in a cell relay network, comprising the steps of creating a template data structure representing the structure of a cell to be assembled, storing said template data structure in memory, and creating cells by retrieving said template data structures and inserting variable information therein.

The cell template data structures (CTDS) are typically used in an ATM Adaptation Layer  
20 type 1 (AAL1) to produce ATM cells. CTDSs allow the functions of an AAL type 1, as defined in of ITU-T COM 13-R 51-E AAL, to be implemented. CTDSs can also be used in implementations which support Circuit Emulation Service (CES) as described in ATM Forum Specification af-vtoa-0078.00 and Dynamic Structure Sizing (DSS) as defined in ATM Forum Specification af-vtoa-0085.00.

25 A CTDS contains information which is required to construct cells for a virtual circuit (VC). The CTDS typically resides in a memory device such as RAM or registers and is preferably be created by software running on a CPU. The Segmentation portion of the SAR (Segmentation and reassembly) sublayer of an AAL1 Layer can use the information contained in the CTDS to produce cells for a VC. A separate CTDS is used for each VC  
30 being supported by the SAR.

CTDSs may be used to support the following types of CBR Cells:

- UDT (Unstructured Data Transfer) Cells
- SDT (Structured Data Transfer) Cells with and without CES
- DSS (Dynamic Structure Sizing) Cells with and without CES

- 5 The cell templates are normally located in memory. A pointer table is used for this purpose. There is a separate pointer for each VC and, possibly, a separate pointer table for each port.

- 10 In a preferred implementation, the UDT Cell Template structure consists of 5 fields each of which are 16 bits wide. Fields 1-3 Contain the cell header and remain static after being written by the CPU. Field 0 holds the sequence number of the next cell and SRTS information. The segmentation system modifies this field after each cell is produced.

In the SDT Cell Template, fields 0 – 6 may be used to:

- Determine when to produce the cell
- Control the number of channels being sent in the VC
- 15 • Hold SRTS data
- Determine when to produce a pointer cell
- Determine the value of the offset field of a pointer cell
- Calculate the AAL1 Header byte
- Determine when to place CAS values in the cell
- 20 • Determine the location of the next TDM/CAS value to be placed in the cell

Fields 7 – 9 contain cell header information

- The remaining fields of the control structure contain pointers to circular buffers (1 pointer for every channel in the VC) which contain TDM data. The pointers are read in a round robin fashion and are used to control which channels are to be placed into the cell
- 25 payload.



In one embodiment, the SDT DBCES (Structured Data Cell, Dynamic Bandwidth Circuit Emulation Service) template is typically divided into 3 major regions. The first (fields 0 to 5) contains information such as the cell header which does not change when the multiframe structure is re-sized.

- 5 The Alpha and Beta regions of the structure contain the information which changes during a multiframe resize. If the Segmentation process is using the Alpha region to construct cells then the CPU may modify the contents of the Beta region and vice versa. The cr (current region) bit of field 0 is used by the CPU to determine which region may be modified.
- 10 After the CPU has finished writing information to a region it will program the nr (next region) bit of field 0. The cr bit will be set equal to the nr bit by the Segmentation process at the next structure boundary after the next valid pointer and the new multiframe structure will then be sent.

- The invention will now be described in more detail, by way of example, only with reference  
15 to the accompanying drawings, in which:-

- Figure 1 is a system level view of a TXSAR module;
- Figure 2 is a block diagram of a TxSAR block and internal memory;
- Figure 3 shows a data cell control structure;
- Figure 4 shows the TxSAR control structure;
- 20 Figure 5 shows the control structure pointer table for port X;
- Figure 6 shows the TxSAR control structure for SDT non DBCES mode;
- Figure 7 shows how the read\_pointer is used to access circular buffers; and
- Figure 8 shows the DBCES control structure.

- Referring now to Figure 1, a TxSARs (Transmit Segmentation and Reassembly module)  
25 includes a TxSAR block 1, which outputs ATM cells to a UTOPIA interface 2 and is connected over a bi-directional link to a control structure memory 3. The TxSAR block 1 receives data from UDT buffer unit 5, circular buffer unit 6, and SRTS unit 7.

The memory 3, as shown in Figure 2, is a 1056 x 16 block of internal RAM memory, which in turn is connected to a microprocessor block 8. The memory 3 contains a control structure for each VCC of the TDM port and is used in the cell assembly process. The format of the control structure depends on the mode of operation (UDT, SDT (non  
5 DBCES), SDT (DBCES)). The control structures are discussed below.

The data TX\_SAR control structure is shown in Figure 3. The Base Address of the TxDataCell FIFO in external memory is selected in the Data TX\_SAR configuration register (1038). This register is also used to select the size of the cell fifo. Cells must begin on 64 byte boundaries as illustrated in Figure 3.

10 Cell transmission begins when the write pointer is set to the top of the fifo and the Data TX\_SAR is enabled via a TDSEN bit in register 103E. The cells in the fifo will be sent in order starting with the lowest memory address. After each cell is produced the Data TX\_SAR increments a read\_pointer and cell transmission will cease when the read pointer is equal to the write pointer. If the write pointer is set to be higher then the size of  
15 the fifo the Data TX\_SAR will continuously send the contents of the fifo.

The same memory is used for both SDT and UDT. In the UDT mode, however, only the lower five locations of the memory are used. Figure 4 shows the format of the control structure for one of 28 TDM ports feeding the TX\_SAR.

Each of the fields of the control structure are described in detail as follows:

#### 20 Field0

reserved (bits 15:8):

These bits are reserved for future revisions of the chip and are initialized to 0

srts (bits 7:4):

If the srts\_enable (se) bit of the control structure is set to one then the TxSAR will read an  
25 srts nibble from the Clock Management block at the beginning of each cell sequence (sequence = b#000). This value will be stored in the srts bits. In cells with odd sequence numbers the most significant srts bit will be placed into the csi bit of the SAR-PDU header. The SRTS value will then be shifted left and written back to the srts bits. In this way a complete SRTS nibble will be sent in each 8 cell sequence.

srts\_enable (bit 3):

The srts\_enable (se) bit is used to indicate that the VCC is carrying SRTS data. When high the TxSAR will place SRTS data into the csi bit, of the SAR-PDU header, in cells with odd sequence values. When low the csi bit will always be set to zero.

5 sequence(bits 2:0):

These bits hold the sequence number of the next cell to be transmitted. The sequence bits should be initialized to b#000 by the cpu.

**Field 1**

gfc (bits 15:12):

- 10 The gfc (Generic Flow Control) value is placed in the gfc field of the cell header in a UNI cell. If the associated cell is NNI these bits form the four most significant bits of the vpi.

vpi (bits 11:4):

The TxSAR will place this value into the vpi field of the cell header.

vci (bits 3:0):

- 15 The TxSAR will place this value into the vci field of the cell header.

**Field 2**

vci (bits 15:4):

The TxSAR will place this value into the vci field of the cell header.

pti (bits 3:1):

- 20 The TxSAR will place this value into the pti field of the cell header.

clp (bit 0):

The TxSAR will place this value into the clp field of the cell header.

**Field 3**

hec (bits 15:8):

- 25 The physical layer is generally responsible for calculating the hec value and therefore this field is normally used as a place holder. If the physical layer does not calculate hec then

the contents of the hec field of the TxSAR control structure will appear in the hec field of the cell header. The user may generate this value by performing a modulo 2 division on the first 4 octets of the cell header using the generator polynomial  $G(x) = x^8 + x^2 + x + 1$ .

#### 5 udf (bits 7:0):

This value is copied to the udf2 field of the cell header when the UTOPIA module is operating in 16 bit mode.

#### Field 4

Field 4 contains the number of cells that have been transmitted. The cpu should initialize this field to 0000h.

#### Control Structure Pointer Table

In the SDT DBCES and Non DBCES modes the TxSAR makes use of pointer tables to determine the location of each control structure in the internal memory 3. Each port of the device which is in SDT mode has a pointer table associated with it. The base address of the pointer table, in internal memory, is programmed through the PX\_PTB register shown in the table below.

Port 0 Pointer Table Base Address

Address: 2002 (Hex)			
Label: P0_PTB			
Reset Value: 0000 (Hex)			
Label	Bit Position	Type	Description
PTBA	15:0	R/W	In SDT mode these bits hold the base address of the port 0 control structure pointer table. In UDT mode these bits form a pointer to the UDT control structure associated with port 0.

As shown in Figure 5, the PX\_PTB register contains the word address of the pointer table X base in internal memory. For example a value of 10h indicates that the base of the pointer table starts on the 16th word in internal memory (byte address 20h). The value in the PX\_PTB represents an offset from the base address of the TxSAR internal memory in the Monaco chip.

The following is a description of the fields of a pointer:

L (Bit 15):

A value of 1 in this bit indicates that the current pointer is the last valid pointer in the table and as a result the TxSAR will not read any further entries in the current table.

5 A (Bit 14):

A value of 1 in this bit indicates that the associated control structure is active. If this bit is set to 0 the TxSAR will not produce cells for the associated control structure.

Control Structure Pointer (Bits 13:0):

10 This is the address of a control structure expressed as a word offset from the base address of the TxSAR Internal memory.

A detailed description of each field of the TxSAR control structure for non DBCES SDT mode follows with reference to Figure 6.

Field 0

nmbr\_of\_tdm (15:10):

15 This field indicates the number of TDM octets required to fill the next cell of the corresponding VCC. It is used by the TxSAR to determine when to create a cell for the VCC associated with the control structure. After each cell of the VCC is sent the TxSAR will determine the number of octets available for TDM in the next cell and update the nmbr\_of\_tdm field. This field must be initialized by the user as shown in the Table  
20 below.

Initial nmbr\_of\_tdm field values

TDM mode	nmbr_of_channels	nmbr_of_tdm value
DS1	1	45
DS1	2:24	46
E1	1	44
E1	2	45
E1	3:30	46
J2	1:96	46
STBUS	1:30	46

nmbr\_of\_channels (9:2):

The nmbr\_of\_channels (Number of Channels) bits indicate the number of TDM channels in the VCC associated with the control structure. The following table summarizes the range of possible values.

5

nmbr\_of\_channels field values

TDM Type	Range of values in nmbr of channels field
DS1	1 to 24
E1	1 to 30
Back Plane Mode	1 to 128

remainder (bit 1):

This bit indicates that there is enough TDM data to create more than 1 cell in the current frame. It should be initialized to 0.

10 wait for multiframe (bit 0):

When 1 the TxSAR will wait for the multiframe boundary before producing the first cell of the VCC. This will result in the first basic frame of the multiframe being sent in the first payload octet of the first cell (sequence = 0, offset field = 0). When 0 the first cell will be produced as soon as enough TDM data is available.

15 Field 1

read\_pointer (bits 15:10):

The value in this field is concatenated with circular\_buffer\_base\_ptrG to form an address within a circular bufferG as shown in Figure 7. The read\_pointer field will be incremented each time current\_tdm = last\_tdm. Initialize this field to 00h

20 unused (bits 9:8):

Reserved for future use. Initialize these bits to 0.

first\_cell (bit 7):

This bit should be initialized to 1 by the cpu It is used to indicate that this is the first cell to be sent for the current VCC.

srts (bits 6:3):

If the srts\_enable (se) bit of the current VCC is set to one then the TxSAR will read an SRTS nibble from the Clock Management block at the beginning of each cell sequence (sequence = b#000). This value will be stored in the srts bits. In cells with odd sequence

- 5 numbers the most significant bit of the SRTS value will be placed into the csi bit of the SAR-PDU header. The SRTS value will then be shifted left and written back. In this way a complete SRTS nibble will be sent in each 8 cell sequence. This field does not need to be initialized by the user.

sequence (bits 2:0):

- 10 The sequence bits hold the sequence number of the cell that is about to be assembled by the TxSAR. This value is used by the TxSAR to generate the SAR-PDU header and determine if the current cell is to be a P format cell. The sequence number of the next cell in the VCC is determined using the equation:

$$NextSequence(CurrentSequence) = \begin{cases} CurrentSequence+1 & \text{for } CurrentSequence < 7 \\ 0 & \text{for } CurrentSequence = 7 \end{cases}$$

- 15 The next sequence number is written to the sequence bits of the TxSAR control structure after the current cell has been sent.

Initialize sequence to 0h.

Field 2

structure\_lngth(bits 15:4):

- 20 The structure\_lngth (Structure Length) field contains the length of the multiframe structure (payload substructure + signalling substructure). As an example:

TDM type = DS1

nmbr\_of\_channels = 3

structure\_lngth = nmbr\_of\_channels x 24 + roundup(nmbr\_of\_channels/2) = 74 octets

- 25 The following table provides a summary of possible values.

Value in the Structure Length field (nmbr\_of\_channels = #of channels in the VCC)

TDM Type	Value to be written to Structure Length	Range of Structure
----------	---	--------------------

	field	Length value
DS1 with CAS	$24 \times \text{nmbr\_of\_channels} + \text{roundup}(\text{nmbr\_of\_channels}/2)$	25 to 3136
E1 with CAS	$16 \times \text{nmbr\_of\_channels} + \text{roundup}(\text{nmbr\_of\_channels}/2)$	17 to 2112
DS1 without CAS	nmbr of channels	1 to 128
E1 without CAS	nmbr of channels	1 to 128

unused (bits 3:2)

Reserved for future use. Initialize these bits to 0.

mode (bits 1:0)

- 5 The TxSAR requires the mode bits to determine the number of TDM octets in a cell payload. They are used to indicate the TDM structure size relative to a cell payload and the TDM type being used. The meaning of the bits is given in the following table.

**Description of mode bits**

Value of mode bits	Meaning
00	CCS mode or DS1 with CAS number of channels > 1 or E1 with CAS number of channels > 2.
01	DS1 with CAS number of channels = 1
10	E1 with CAS number of channels = 1
11	E1 with CAS number of channels = 2

- 10 Field 3

structure\_boundary\_ptr (bits 15:4):

- The structure\_boundary\_ptr (Structure Boundary Pointer) bits contain the distance, in octets, between the last payload byte written and the next structure boundary. The TxSAR uses this value to keep track of its current position in the multiframe structure, determine when to send a P format cell and to generate the offset field of the SAR-PDU header. Initialize the structure\_boundary\_ptr field to h#0000.

srst\_enable (bit 3):

The srts\_enable (se) bit is used to indicate that the associated VCC is carrying SRTS data. When high the TxSAR will place SRTS data into the csi bit of the SAR-PDU header in



cells with odd sequence values. When low the csi bit will be set to zero in cells with odd sequence values. Only one VCC/per link may carry SRTS.

pointer\_sent (bit 2):

- 5 The pointer\_sent (ps) bit is used to ensure that only a single P format cell is sent within an eight cell sequence. When the P format cell occurs this bit will be set high by the TxSAR. No further P format cells will be produced while ps = 1. When the last cell of the sequence (sequence = b#111) is sent ps will be cleared so that another P format cell will be produced in the next cell sequence. The pointer\_sent bit should be initialized to the value of the pointer\_enable bit.

- 10 pointer\_enable (bit 1):

The pointer\_enable (pe) bit should be set to zero in a single channel VCC which is not transporting CAS. This will prevent P format cells from being produced for the VCC. pe should be set to one in all other cases. This will cause the P format cell to be generated once per eight cell sequence.

- 15 pointer\_cell (bit 0):

After transmission of a cell the TxSAR will determine if the next cell of the VCC is to be a P format cell and will set the pointer\_cell (p) bit accordingly. When the time comes to create the next cell the SAR will place the SAR-PDU pointer field in the cell if p = 1. This bit must be initialized to the value in the pointer\_enable field.

- 20 Field 4

current\_cas (bits 15:8):

When the TxSAR is writing CAS data to the cell payload it will use this field to keep track of which circular buffer pointer to read next. Initialize this field to 0Ah.

- 25 current\_tdm (bits 7:0):

When the TxSAR is writing TDM data to the cell payload it will use this field to keep track of which circular buffer pointer to read next. Initialize this field to 0Ah.

Field 5

last (bits 15:8):

This field contains the address (relative to field0) of the last valid circular\_buffer\_base\_ptr in the control structure. In general

last = nmbr\_of\_channels + 9

5 Example:

nmbr\_of\_channels = 8

last = 11h

nmbr\_of\_cas (bits 7:0):

10 The nmbr\_of\_cas (ncas) field contains the size, in octets, of the signalling substructure and should be initialized as shown in Table .

Example

In the case of a DS1 link with nine channels in the payload substructure.

nmbr\_of\_cas = 5.

Possible nmbr\_of\_cas values. K = # of channels in the structure

TDM mode	Formula	nmbr of cas Range
DS1	roundup(K/2)	0 to 64
E1	roundup(K/2)	0 to 64
CCS mode	NA	0

15

Field 6

cell\_count\_statistic (bits 15:0)

The cell\_count\_statistic bits indicate the number of cell that have been produced for the VCC. Initialize these bits to 0000h.

20 Header 1

gfc (bits 15:12):

The gfc (Generic Flow Control) value is placed in the gfc field of the cell header in a UNI cell. If the associated cell is NNI these bits form the four most significant bits of the vpi.

vpi (bits 11:4):

The TxSAR will place this value into the vpi field of the cell header.

vci (bits 3:0):

The TxSAR will place this value into the vci field of the cell header.

5 1.0.16 Header 2

vci (bits 15:4):

The TxSAR will place this value into the vci field of the cell header.

pti (bits 3:1):

The TxSAR will place this value into the pti field of the cell header.

10 clp (bit 0):

The TxSAR will place this value into the clp field of the cell header.

Header 3

hec (bits 15:8):

- 15 The physical layer is generally responsible for calculating the hec value and therefore this field is normally used as a place holder. If the physical layer does not calculate hec then the contents of the hec field of the TxSAR control structure will appear in the hec field of the cell header. The user may generate this value by performing a modulo 2 division on the first 4 octets of the cell header using the generator polynomial  $G(x) = x^8 + x^2 + x + 1$ .

20 udf (bits 7:0):

This field is copied to the udf2 field of the cell header when the UTOPIA module is operating in 16 bit mode.

Circular Buffer Pointer Space

circular\_buffer\_base\_ptrX (bits 15:0):

- 25 The Circular Buffer base pointers are concatenated with the read\_pointer bits to form the 22 bit address shown in Figure 7. This value is used to address a TDM or CAS value in a particular circular buffer. There will be a pointer for each channel in the VCC.

## DBCES Control Structure

The DBCES Control Structure is shown in Figure 8.

### Field 0

unused(Bits 15:6)

- 5 These bits are reserved for future use and should be initialized to 0.

first(Bit 5)

This bit should be set to 1 by the cpu when the control structure is initialized.

number\_of\_bit\_masks (Bits 4:2)

The following table indicates the number of masking octets in the bit mask substructure.

10 meaning of nmbr\_of\_bit\_mask bits

nmbr of bit mask bits	Size of bit masking substructure
001	1 octet
010	2 octets
011	3 octets
100	4 octets
all others	Invalid

next\_region (Bit 1):

- 15 This bit is used to re-size the multiframe structure and indicates the region of the control structure which will be used after the re-size occurs. When the time comes to re-size the structure the cpu should initialize the region of the control structure which is not being read by the TxSAR. The next\_region bit is then set cpu must wait for the next\_region and current\_region bits to contain the same value. It may then set the next\_region bit

next\_region bit definition

next region	control structure region used after re-size
0	Alpha region
1	Beta region

20

current\_region (Bit 0):

This bit indicates the region of the control structure that the TxSAR is currently using to construct cells refer to the following table . To re-size the structure the cpu should write in the region which is not being used to assemble cells. Initialize this bit to 0.

#### 5 current\_region bit definition

current_region	control structure region currently being used	region available for the cpu to write
0	Alpha region	Beta region
1	Beta region	Alpha region

#### Field 1 cell\_count\_statistic

This field contains the number of cells which have been currently sent. It should be initialized to 0000h.

#### Field 2

time\_out (Bits 15:12):

These bits are used to control the time between the transmission of cells which are transporting inactive structures. The time between cells is determined as follows:

#### 15 inactive\_structure\_timer (11:0):

These bits are used to determine if it is time to send a cell which is carrying an inactive structure. The cpu should initialize this value to 000h.

#### Cell Header Fields

These fields are placed into the cell header

#### 20 Field 6 Alpha and Beta regions

nmbr\_of\_tdm (Bits 15:10):

This value is represents the number of octets in the next cell which are available fro transporting TDM. Initialize this value according to the following table.

Initialization of nmbr\_of\_tdm bits

multi frame configuration	nmbr of tdm
DS1 with CAS nmbr of channels = 1	45
E1 with CAS nmbr of channels = 1	44
E1 with CAS nmbr of channels = 2	45
all other configurations	46

nmbr\_of\_channels (Bits 9:2):

- The nmbr\_of\_channels value indicates the number of TDM channels in the VCC associated with the control structure and may contain a value of 0 to 31 inclusive.

structure\_boundary\_in\_next\_cell (Bit 1):

This bit indicates that the structure boundary will occur in the next cell. Initialize this value to 1.

unused (Bit 0):

- 10 This bit is reserved for future use and should be initialized to 0.

Field 7 Alpha and Beta Regions

read\_pointer (Bits 15:10):

- This value is concatenated with the circular buffer pointer to form an address to a TDM/CAS value in a circular buffer. In the case of many  $N = 1$  VCCs these bits may be used to distribute cell production over 64 frames.

current\_bit\_mask (Bits 9:3):

This is a pointer to the next bit mask to be sent. Initialize this value according the following table.

Initialization of current\_bit\_mask

Control Structure Region	current bit mask initialization value
Alpha	2Ch
Beta	56h

20

sequence (Bits 2:0):

These bits hold the sequence number of the next cell. Initialize this value to 0h.

#### Field 8 Alpha and Beta Regions

structure\_length (Bits 15:3):

This value represents the length of the multiframe structure and should be initialized as follows:

Initialization of structure\_length value

TDM Type	Value to be written to Structure Length field	Range of Structure Length value
DS1 with CAS	$24 \times \text{nmbr\_of\_channels} + \text{roundup}(\text{nmbr\_of\_channels}/2)$	0 to 588
E1 with CAS	$16 \times \text{nmbr\_of\_channels} + \text{roundup}(\text{nmbr\_of\_channels}/2)$	0 to 495
DS1 without CAS	nmbr of channels	0 to 31
E1 without CAS	nmbr of channels	0 to 31

unused (Bits 3:2):

Reserved for future use. Initialize these bits to 0h.

10 mode (Bits 1:0):

Initialize these bits according to the following table.

Initialization of mode bits

Configuration	mode
DS1 with CAS nmbr_of_channels = 1	01b
E1 with CAS nmbr_of_channels = 1	10b
E1 with CAS nmbr_of_channels = 2	11b
all other conditions	00b

#### Field 9 Alpha and Beta regions

15 structure\_boundary\_pointer (Bits 15:4):

This pointer is used to keep track of the current location within the multi-frame structure. Initialize this value to 000h.

mask\_pending (Bit 3):

This bit indicates that a bit mask will occur within the next 94 octets. Initialize this bit to 1.

pointer\_sent (Bit 2):

- 5 Indicates that a pointer was sent in the current cell sequence. Initialize this bit to 0.

pointer\_enable (Bit 1):

Initialize this bit to 1.

pointer\_cell (Bit 0):

This bit indicates that the next cell is a pointer cell. Initialize this bit to 1.

- 10 Field 10 Alpha and Beta regions

current\_cas (Bits 15:8):

This is a pointer to the next circular buffer from which CAS is to be read. Initialize this value according to the following table.

Initialization of current\_cas pointer

15

Control Structure Region	current bit mask initialization value
Alpha	0Dh
Beta	37h

current\_tdm (Bits 7:0):

This is a pointer to the next circular buffer from which TDM is to be read. Initialize this value according Table

- 20 Initialization of current\_tdm pointer

Control Structure Region	current bit mask initialization value
Alpha	0Dh
Beta	37h



#### Field 11 Alpha and Beta region

last (Bits 15:8):

This is a pointer to the last circular buffer pointer in the control structure. Initialize this pointer according to the following table.

5

#### Initialization of last pointer

Control Structure Region	current bit mask initialization value
Alpha	nmbr of channels + 0Ah
Beta	nmbr of channels + 36h

nmbr\_of\_cas (Bits 7:0):

- 10 This value represents the number of CAS octets in the multiframe structure. Initialize this value as shown in the following table.

#### Initialization of the nmbr\_of\_cas value

Configuration	nmbr of cas value
CAS mode	roundup(nmbr of channels / 2)
CCS mode	0

15

#### Field 12 Alpha and Beta regions

unused (Bits 15:7):

Reserved for future revisions. Initialize to 000h.

last\_bit\_mask (6 bits):

- 20 This is a pointer to the last bit mask in the control structure. Initialize this pointer according to the following table.

### Initialization of last bit mask pointer

Control Structure Region	current bit mask initialization value
Alpha	number of bit masks + 2Bh
Beta	number of bit masks + 55h

### Circular buffer pointer space

#### 5 circular\_buffer\_base\_ptrX (bits 15:0):

The Circular Buffer base pointers are concatenated with the read\_pointer bits to form the 22 bit address shown in Figure 7. This value is used to address a TDM or CAS value in a particular circular buffer. There will be a pointer for each channel in the VCC.

### Bit mask space

- 10 These values are placed into the bit masking octets of the cell. The contents of the field are set to conform with AF-VTOA-0085.000 July 1997. The values are written to the cell in order starting with field 44.

The TXSAR registers will now be listed.

### Port 0TxSAR Operation Mode Register

Address: 2000 (Hex)			
Label: P0_TXOM			
Reset Value: 0000 (Hex)			
Label	Bit Position	Type	Description
TCFNG	1:0	R/W	TxsAR Configuration. 00 TxSAR is disabled 01 UDT mode 10 SDT DBCES Mode 11 SDT Non DBCES Mode
Reserved	15:2	R/O	Reserved. Always read "0000_0000_0000_00".

15

### Data TX\_SAR Configuration Register

Address: 2004 (Hex)			
Label: TXCFGR			
Reset Value: 0000 (Hex)			

Label	Bit Position	Type	Description
DTSIZE	1:0	R/W	Data TX_SAR cell buffer size selection. 00 - 16 Cells 01 - 32 Cells 10 - 64 Cells 11 - 128 Cells
DTBASE	10:2	R/W	Data TX_SAR Cell Buffer Base Address. These bits represent address bits 20:12 of the base address of the cell buffer in external memory.
Reserved	15:11	R/O	Always read "0000 0"

#### Data TX\_SAR Write Pointer

Address: 2006 (Hex)			
Label: DTWPR			
Reset Value: 0000 (Hex)			
Label	Bit Position	Type	Description
DTWP	7:0	R/W	Data TX_SAR Write Pointer. Indicates the cell structure number in which the cpu is currently writing (the cell is not yet valid).
Reserved	15:8	R/O	Always read "0000_0000"

#### Data TX\_SAR Read Pointer

Address: 2008 (Hex)			
Label: DTRPR			
Reset Value: 0000 (Hex)			
Label	Bit Position	Type	Description
DTWP	6:0	R/O	Data TX_SAR Read Pointer. Indicates the cell structure number in which the Data TX_SAR is currently reading. This pointer is cleared when the TDSSEN bit in the Data TX_SAR control register is set to 0.
Reserved	15:7	R/O	Always read "0000 0000 0"

5

#### Data TX\_SAR Control Register

Address: 200A (Hex)
---------------------

Label: DTCR Reset Value: 0000 (Hex)			
Label	Bit Position	Type	Description
TDSEN	0	R/W	Data TX_SAR Enable. When 0 the read pointer is reset to 0000_000 and no data cells are produced. When 1 the Data TX_SAR will send the cells in the cell buffer.
AUTO	1	R/W	When 1 the Data TX_SAR will produce cells when the CBR TX_SAR is not busy. When 0 the Data cell generation is controlled by the DCGTOR register.
FMTIE	2	R/W	Cell Buffer Empty Interrupt Enable. When 1 the Cell Buffer Empty interrupt will be asserted when the cell buffer is empty. When 0 this interrupt is masked.
Reserved	15:3	R/O	Always read "0000 0000 0000 0"

Table 2 - Data Cell Generation Time Out Register

Address: 200C (Hex) Label: DCGTOR Reset Value: 0001 (Hex)			
Label	Bit Position	Type	Description
DCGP	9:0	R/W	These bits represent the time in mS between data cell transmission when the Data TX_SAR is in timer mode. A value of 0000_0000_00 will disable data cell transmission.
Reserved	15:10	R/O	Always read "0000 00"

5

Data TX\_SAR Status Register

Address: 200E (Hex) Label: DTSR Reset Value: 0000 (Hex)			
Label	Bit Position	Type	Description
TBMT	0	R/O	Transmit Cell Buffer Empty. This bit is set when the read pointer is equal to the write pointer and indicates that all of the cells in the buffer have been sent..
Reserved	15:1	R/O	Always read "0000_0000_0000_000"

It will thus be seen that the use of template data structure considerably improves the efficiency of cell formation in the SAR device.

Claims:

1. A method of assembling cells for use in a cell relay network, comprising the steps of creating a template data structure representing the structure of a cell to be assembled, storing said template data structure in memory, and creating cells by retrieving said  
5 template data structures and inserting variable information therein.
2. A method as claimed in claim 1, wherein a pointer table stores the location of said data structures in memory.
3. A method as claimed in claim 2, wherein a separate pointer is provided for each virtual channel in the network.
- 10 4. A method as claimed in claim 1, wherein circular pointers control which circular buffers are associated with a virtual channel in said network.
5. A method as claimed in claim 4, wherein the circular buffer pointers to control the order in which data is placed in the cell payload.
6. A method as claimed in any one of claims 1 to 5, wherein said template data  
15 structure is created by a program running on a central processing unit.
- 6a. A method as claimed in claim 1, wherein in a DBCES service with a multiframe structure, re-sizing of the multiframe structure is carried out with the aid of a DBCES Cell Template.
7. A method as claimed in claim 6a for use in an SDT DBCES (Structured Data  
20 Transfer Dynamic Bandwidth Circuit Emulation) service, wherein the DBCES data structure has three major regions, namely a first region containing information that does not change when the multiframe structure is re-sized, and two regions containing information that changes during multiframe resize.
8. A method as claimed in claim 1, wherein said cells are Unstructured Data Transfer  
25 (UDT), Structured Data transfer (SDT), or DSS (Dynamic Structure sizing) cells.
9. A device for assembling cells from a data stream for transmission over a cell relay network, comprising:  
a memory storing a template data structure representing the structure of a cell to be assembled; and

a segmentation unit for retrieving said template data structure from said memory and creating cells by inserting variable information therein.

10. A device as claimed in claim 9, wherein said memory is connected to a microprocessor controlling the operation thereof.
- 5 11. A device as claimed in claim 9, further comprising a pointer table storing the location of said data structures in said memory.
12. A device as claimed in claim 9, further comprising circular buffers associated with virtual channels in said network, and circular pointers for controlling which circular buffers are associated with which channels.
- 10 13. A device as claimed in claim 9, wherein the circular buffer pointers control the order in which data is placed in the cell payload.
14. A device as claimed in any one of claims 9 to 13, further comprising a central processing unit connected to said memory and controlling the operation thereof.
15. The use of cell template data structures to form ATM cells.
16. A method of assembling cells for use in a cell relay network, substantially or hereinbefore described with reference to the accompanying drawings.
17. A device for assembling cells from a data stream for transmission over a cell relay network, substantially or hereinbefore described with reference to the accompanying drawings.

## ABSTRACT OF THE DISCLOSURE

ATM cells for use in a cell relay network, comprising the steps of creating a template data structure representing the structure of a cell to be assembled, storing said template data structure in memory, and creating cells by retrieving said template data structures and

5 inserting variable information therein.



1/4

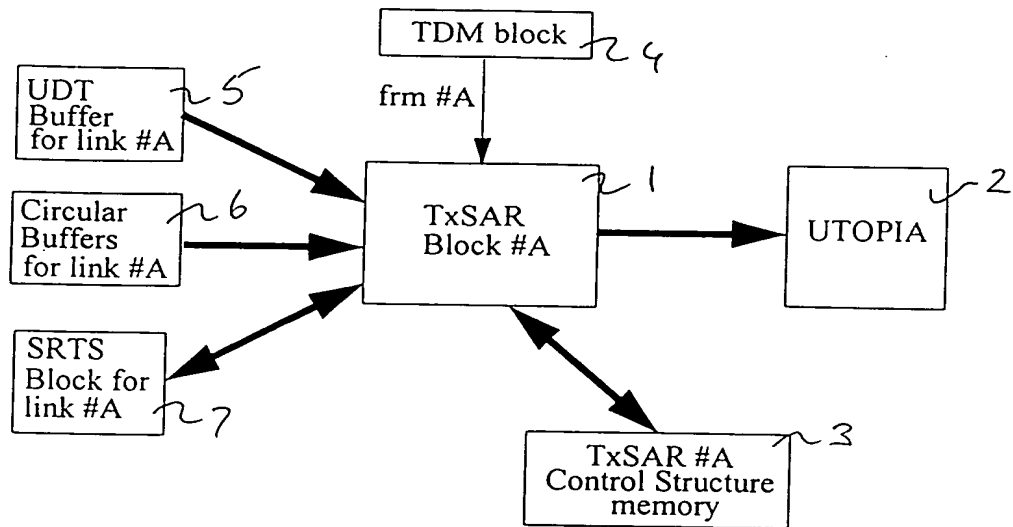


Fig. 1

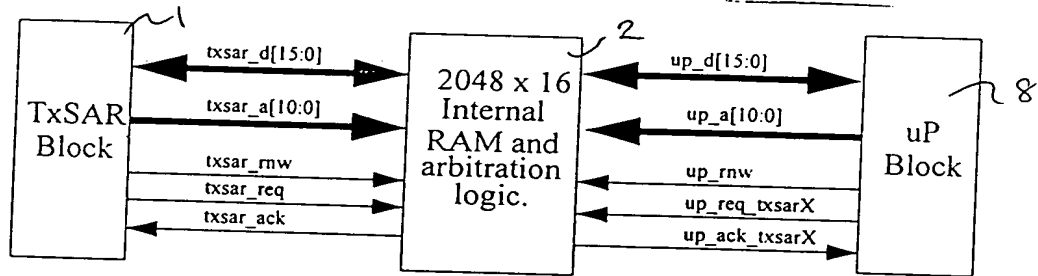


Fig. 2

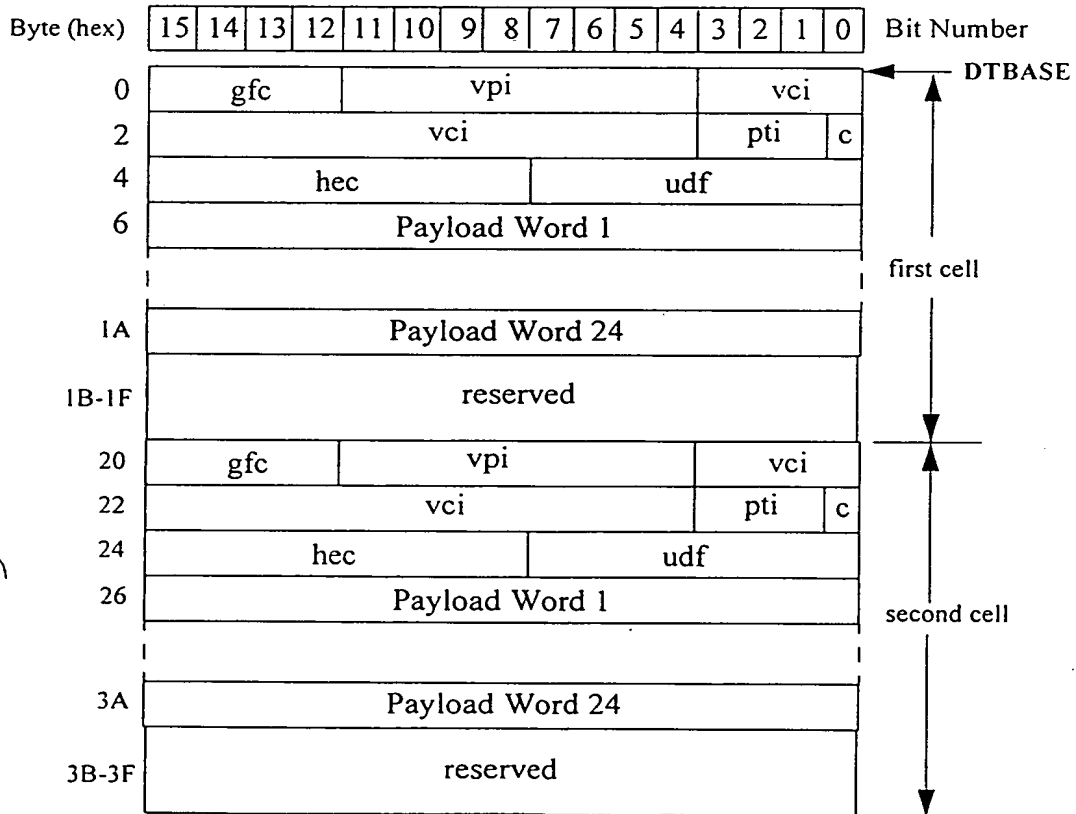


Fig. 3

**THIS PAGE BLANK (USPTO)**


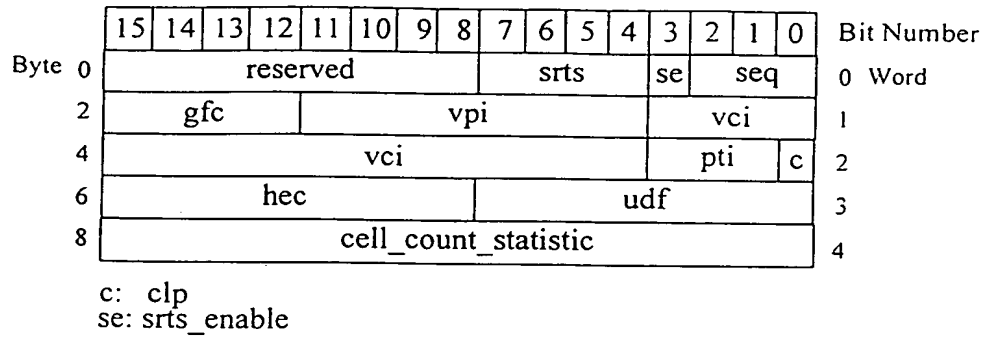


Fig. 4

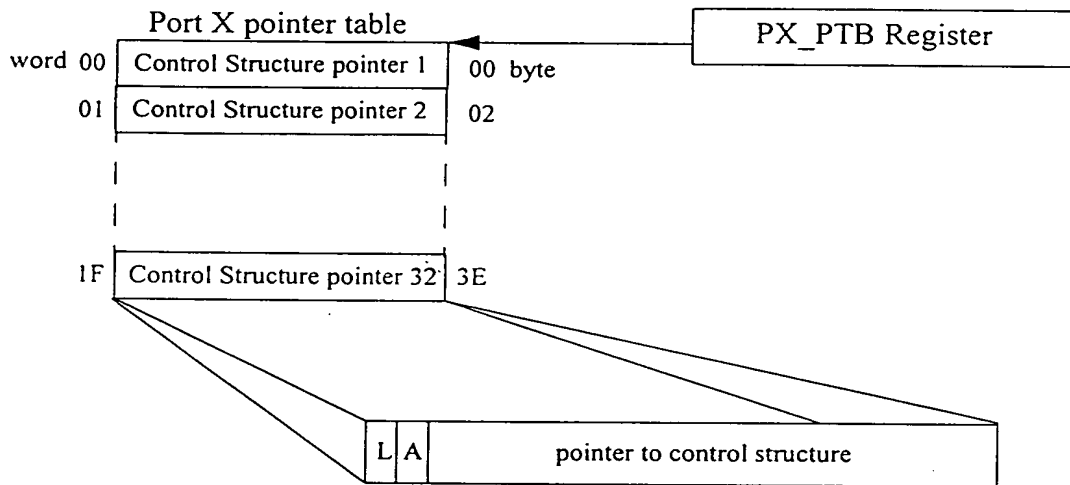

L: Last valid pointer. When 1 indicates that the current pointer is the last valid pointer in the table  
A: Active. When 1 indicates the control structure is active

Fig. 5

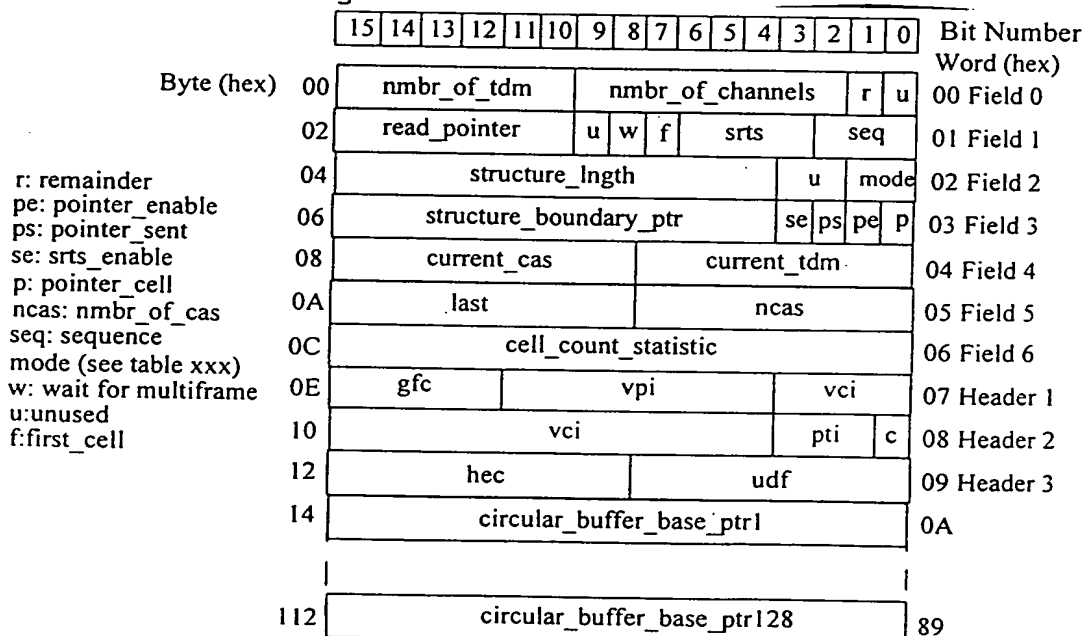


Fig. 6

**THIS PAGE BLANK (USPTO)**

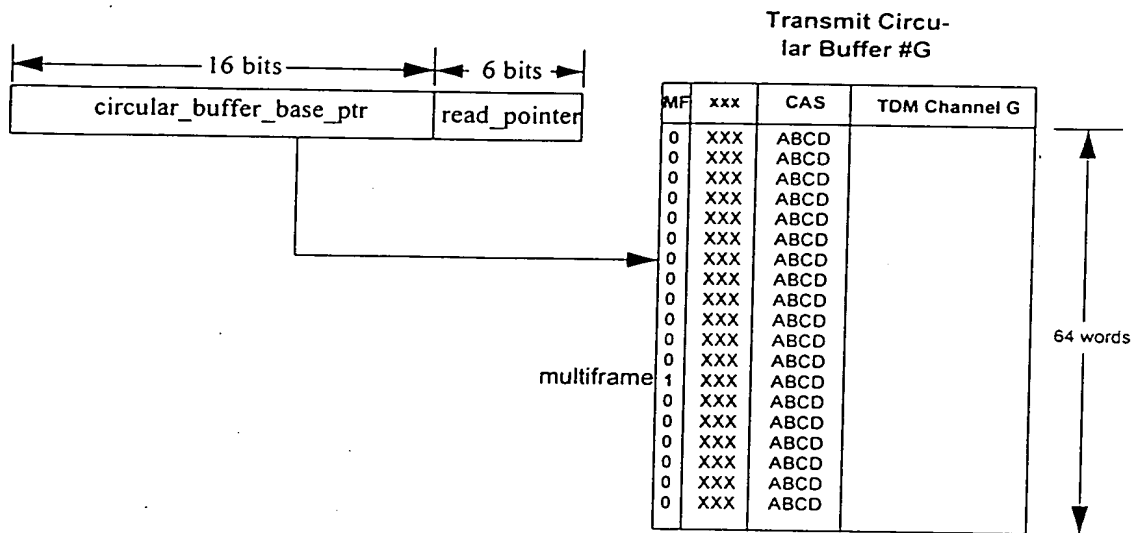


Fig. 7

**THIS PAGE BLANK (USPTO)**

## 4.5 DBCES Control Structure

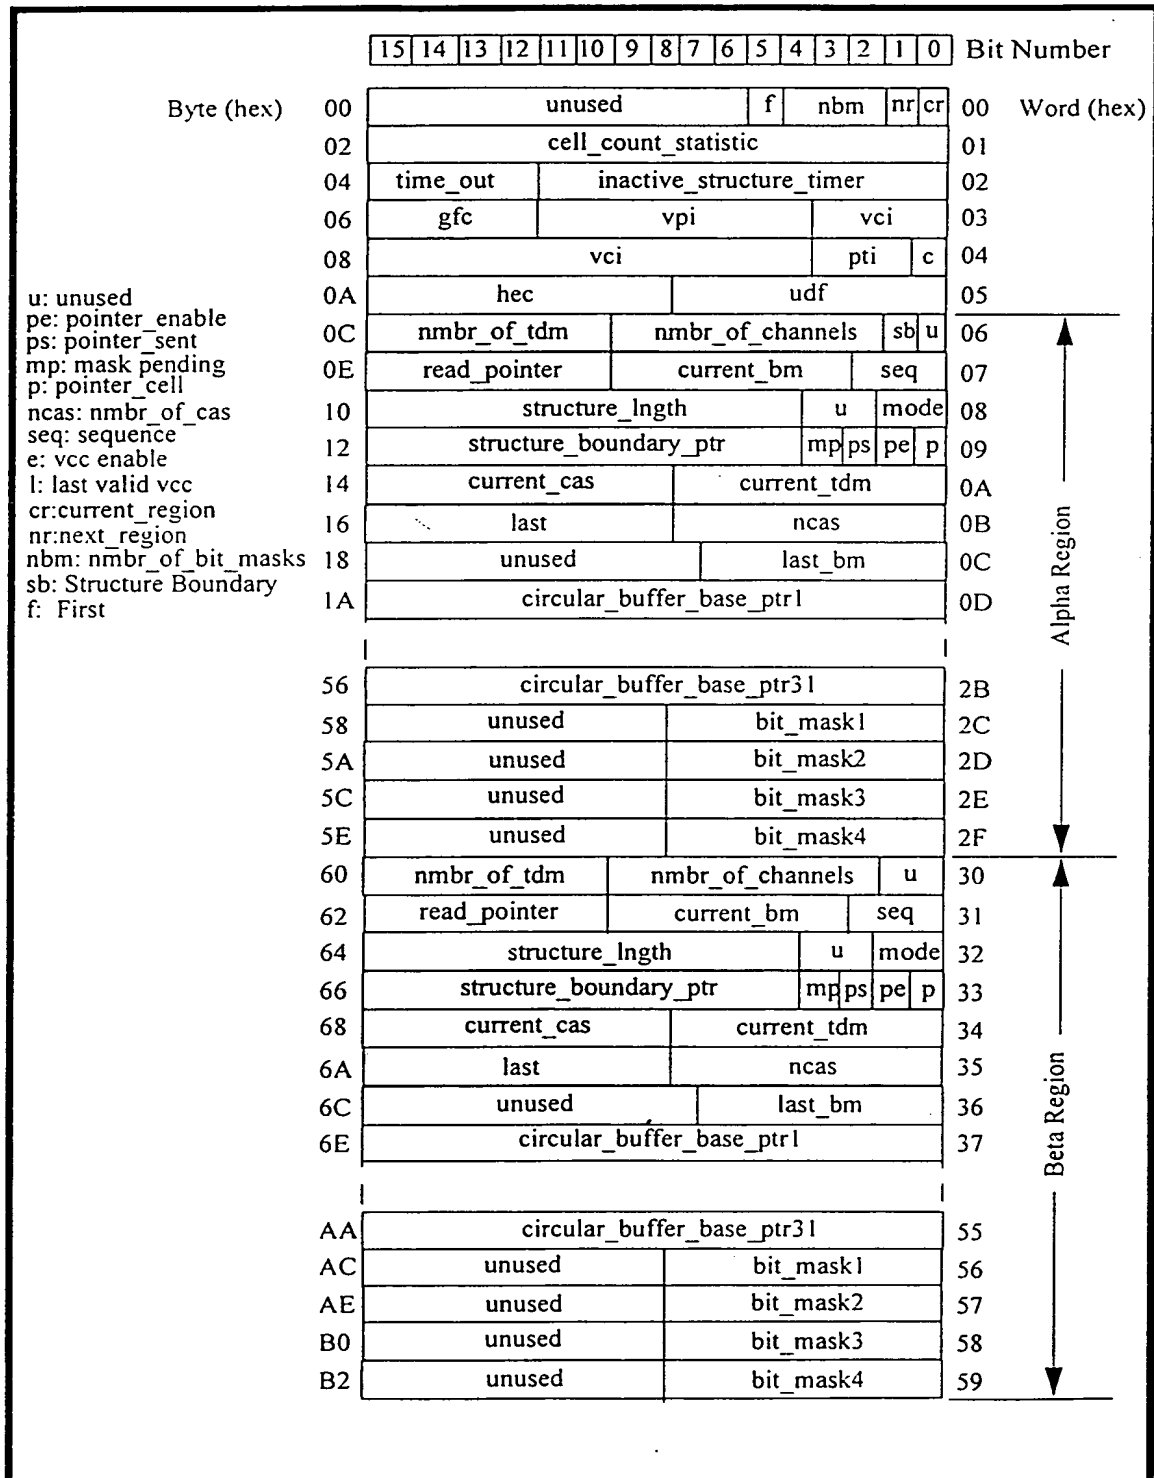


Figure 10. DBCES control structure

Fig: 8

**THIS PAGE BLANK (USPTO)**